

For more information on Iridium Antenna Guidelines visit our website at www.satcom.ws





The antenna can be installed using the pole mount provided.

# **Pole Mount Assembly**

- 1) Feed the cable through the pole
- 2) Feed the cable through the base plate
- 3) Connect the antenna cable to the antenna
- 4) Screw the base to the antenna housing using screws provided
- 5) Screw the pole into the base to secure the pole to the antenna

# **Applications**





# Beam Antenna RST700 / 702

#### Antenna installation is critical for optimum performance of your Iridium service.

## **Installing Guidelines**

To ensure maximum performance of the antenna system and to maximise availability and reliability of service the antenna must;

- have a clear line of site to the sky
- be clear and free of obstructions
- be clear of metal objects
- be located away from other transmitting devices
- be securely affixed in location
- not be located indoors
- be installed in conjunction with a certified cable

#### **Installing Antenna Cables**

When installing antenna cables, follow these guidelines:


- Route and restrain cables to prevent them from vibrating or moving under normal conditions, which could result in damage to the antenna or the coaxial cable connections.
- Wherever the cables contact structures, protect the cables from chafing or abrasion. If a cable needs to be bent, avoid kinking it, and ensure that each bend radius follows the cable supplier limits.
- Use coaxial sealant, shrink-wrap tubing, electrical tape, or another suitable product to seal all cable connections appropriately to prevent moisture and corrosion damage from weather exposure.
- Mount all antennas vertically and clear of nearby metal obstructions
- Minimize horizontal obstructions as much as possible because they can create areas of poor system coverage.
- To minimize the loss of radio signal from the antenna to the terminal, the specific coaxial cable system between the antenna and the other component should be less than 3db including connector loss.

### **Installation Options**

The antenna system is suitable for marine, vehicle and fixed applications and is designed to meet Iridium System performance requirements when installed according to the instructions in this guide.

Preferred Antenna Location

The following figure shows typical Installations:

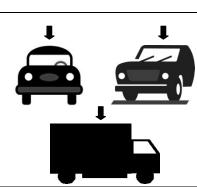

## Vehicle Antenna Installation

The ideal position for any vehiclemounted application is to capitalise on the greatest ground plane from the surface of the vehicle.



#### Marine Antenna Installation

The antenna must be installed without obstruction of other instruments or structures.

The antenna must not be positioned within range of radar equipment or other RF interference.



#### Fixed Site Installation

The antenna must be installed without obstruction of other buildings, chimneys or other structures.

Consideration should also be given to the surrounding environments such as large trees, mountains or other buildings.